
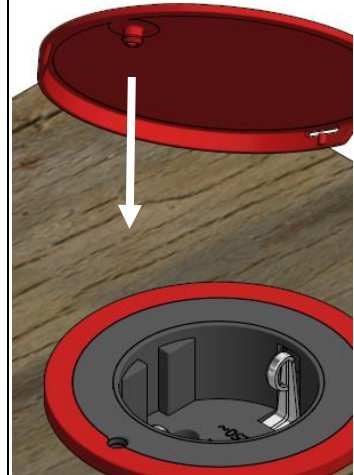
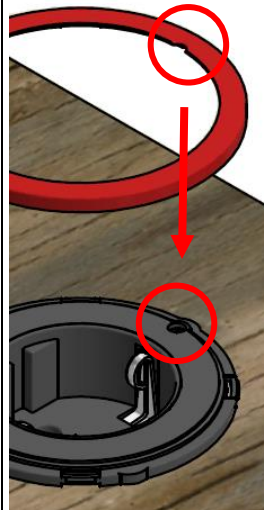


DE- passend wählen
GB- choose suitable
FR- sélectionnez appropriée
ES- escoger adecuado
RO- selectati adecvat

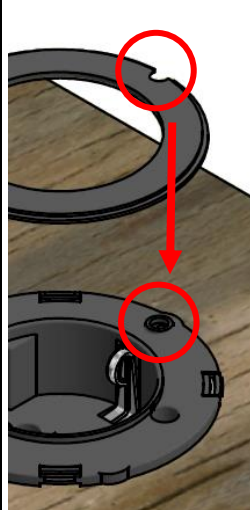

DE- *Spannungsfrei demontieren
GB- *Volt-free dismounting
FR- *Démontage hors tension électrique
ES- *Desmontar sin voltaje
RO- *a nu se demonta cât timp se află sub tensiune electrică