
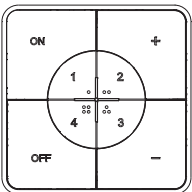
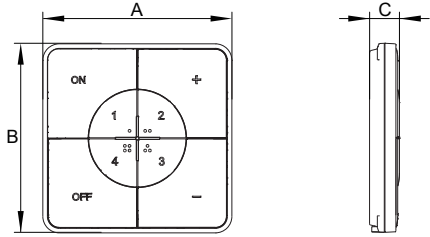


LED Smart-BLE2-Switch

<div style="border: 1px solid black; padding: 5px; display: inline-block;">Item Code</div> <div style="margin-left: 20px; text-align: center;">  kg </div>			
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; border-right: 1px solid black; text-align: center;">821009000200</td> <td style="width: 50%; text-align: center;">0.0684kg</td> </tr> </table>	821009000200	0.0684kg	
821009000200	0.0684kg		




Type	A (mm)	B (mm)	C (mm)
RY-IOT-PNL-8B-BLE	86	86	13.6

Network pairing
Pull out the insulation film to enter pairing mode, the LED indicator will flash for 5 minutes. If you cannot complete pairing within 5 minutes, you should reset it and start pairing.


Reset
Press and hold the reset button for 5 seconds. Reset has been successful when the LED indicator light flashes.

Installation with Screws

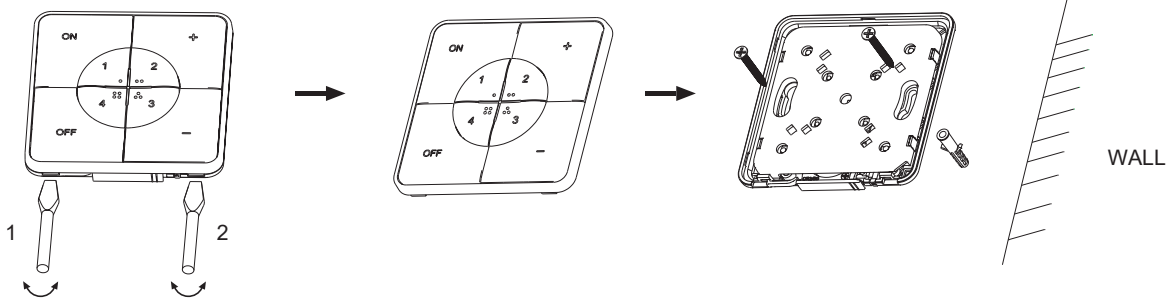



The diagram shows three steps: 1. Two screws (labeled 1 and 2) are inserted into the bottom of the switch. 2. The switch is tilted to show the back. 3. The switch is mounted to a wall using four screws and a mounting plate.

Installation using a Mounting Box


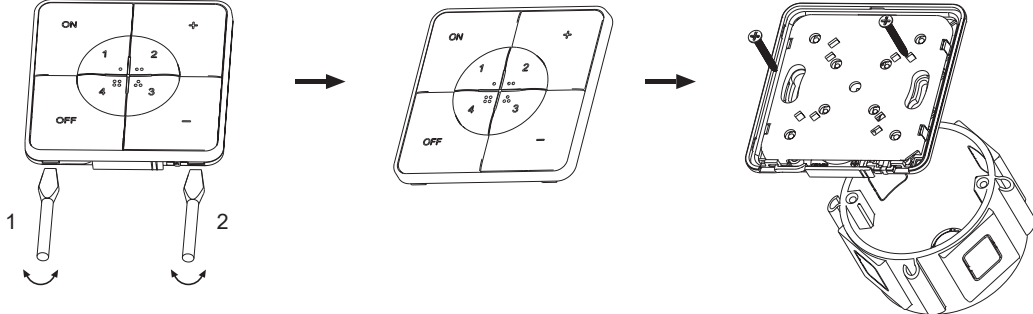


The diagram shows three steps: 1. Two screws (labeled 1 and 2) are inserted into the bottom of the switch. 2. The switch is tilted to show the back. 3. The switch is inserted into a separate mounting box, which is then mounted to the wall.

Installation with Tape

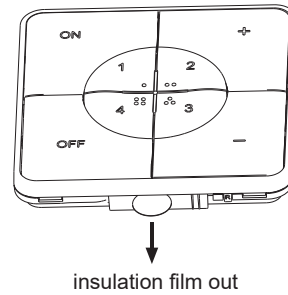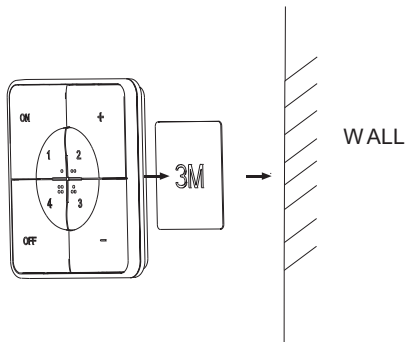

Battery Replacement

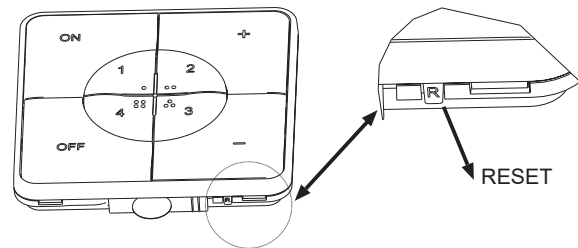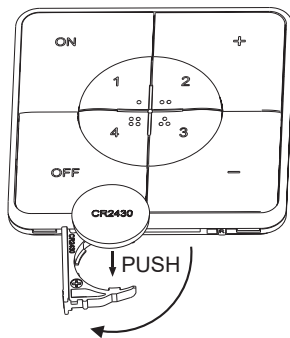

Bluetooth Operating Frequency: 2402-2480 MHz

Bluetooth Max Transmission Power: <+10dBm

Battery: CR2430 – 3V



In case of damage to the wires, it has to be replaced only by the manufacturer, distributor or an expert to avoid risks.

Zur Vermeidung von Risiken müssen defekte Leitungen ausschließlich vom Hersteller, Inverkehrbringer oder Fachmann ausgetauscht werden.

